



BC-M-WH

Mains Voltage Door Bell Chime

REMOVING BELL CHIME COVER:



1. Insert flat head screw driver into the rectangular hole at the bottom of the fitting..



2. Twist the screw driver to pop cover off.

