


1. CHOOSE A CONDUIT ENTRY POSITION. \*
2. SNIP IN 2 POSITIONS VERTICAL TO BASE OF COVER TO A DEPTH OF 14mm.
3. BREAK OUT WITH FLAT PLIERS OR END CUTTERS.

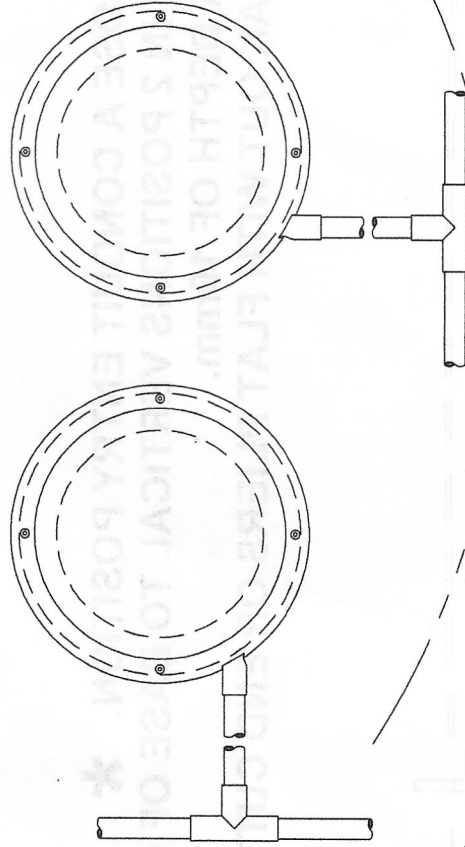

FITTING CONDUIT TO  
LJ6050 SERIES BULKHEAD