Model: **SR**
Reagan GU10 Spotlights
Installation Instructions

superlux
we engineer light

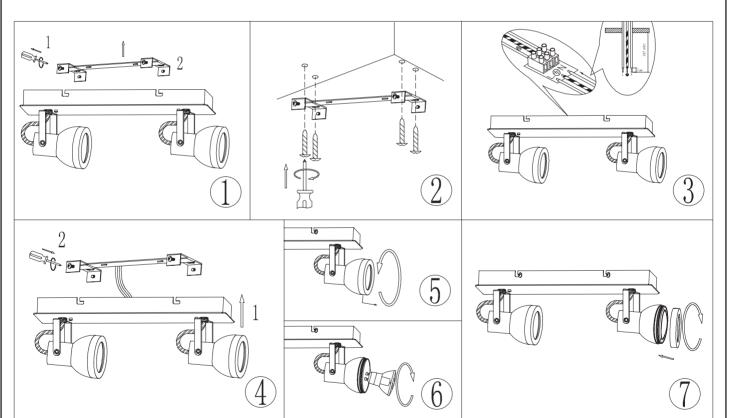**IMPORTANT: Installation by a Registered Electrician is recommended. Isolate the power supply.**

1. Loosen the screws on the side of the backplate and remove mounting bracket.
2. Fix mounting bracket in a suitable locations using appropriate fixings to your wall or ceiling.
3. Connect the supply cable
   Phase to **L**
   Earth to ⏚
   Neutral to **N**
4. Re-assemble Spotlight back onto the mounting bracket
5. Turn left to remove front trim ring from spotlight head
6. Fit GU10 LED lamps by turning 1/4 turn. 10 Watts Max per lamp holder.
7. Turn trim ring right to put it back on.

NOTES:

1. The symbol ⎰ **0.5m MINIMUM** ⎱ indicates that lamp head must be at least '0.5M' from the lighted surface.